


6" SPIGOT ASSEMBLY

6" Wide Aluminum Truss. 1" Chords with 5/16" Webs

©2015 EXHIBIT AND DISPLAY TRUSS.COM

Assembly Instructions for 6" Spigot

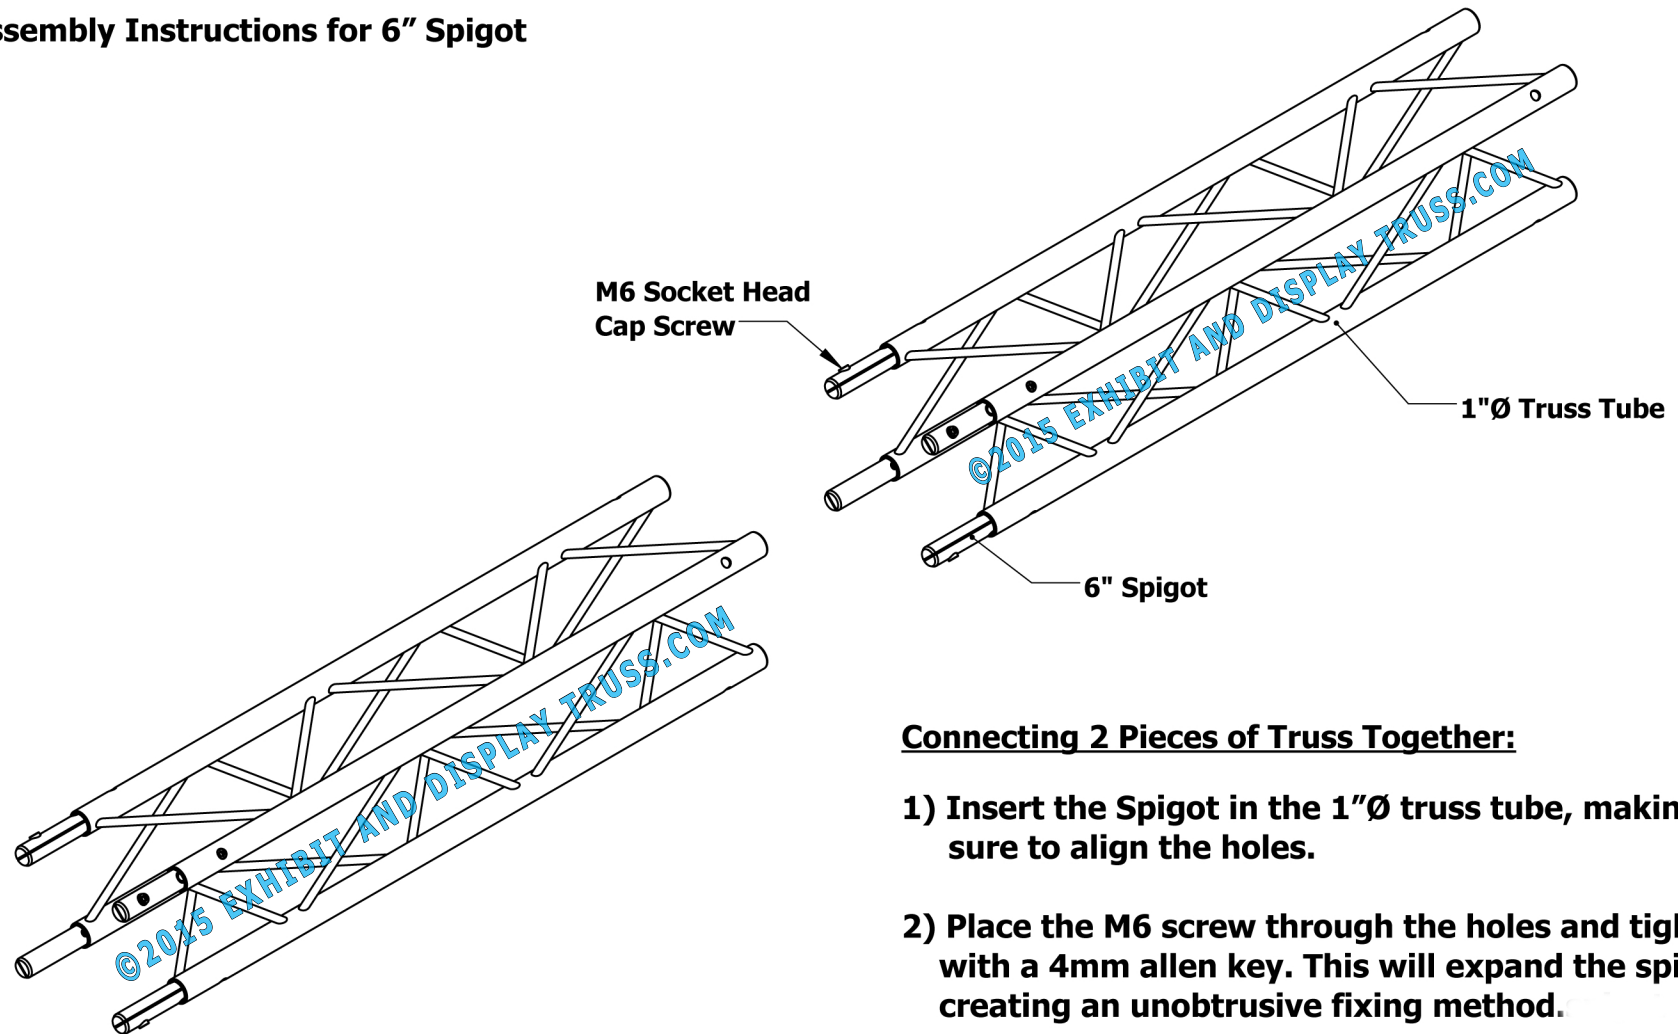

Connecting 2 Pieces of Truss Together:

- 1) Insert the Spigot in the 1"Ø truss tube, making sure to align the holes.
- 2) Place the M6 screw through the holes and tighten with a 4mm allen key. This will expand the spigot, creating an unobtrusive fixing method.
- 3) Place the other 1"Ø tube over the exposed spigot and repeat Step 2.